

Thank you for your purchase, Please find the information you requested below:

Sony NW-A1000 NW-A3000 NW-HD5 NW-HD3 Volume Unlock

NW-A1000 and NW-A3000 instructions are in the attached image file. NW-HD1 NW-HD3 and NW-HD5 instructions are below.

So far only two (of over 400) people have failed to unlock their player with this info. It turned out that their players were already unlocked as they were Australian spec models. IF you have any problems then PLEASE let me know as I am POSITIVE this fix will work for you too.

Start the player. Start playing a song. Turn the HOLD function on by sliding the switch at the top. Then, Hold the SEARCH/MENU/MODE button and enter the button sequence:

Right, Right, Left, Left, Right, Left, Right, Left, Up, Down.

Let go of the buttons, and put the HOLD switch back to its original position. The backlight will cut out and you'll be in the service menu with "POWER" displayed.

Press DOWN a few times to select OTHERS and press Right to get into the menu. Keep pressing down until you get to SP SET (Sound Pressure Setting).

Press Play/Pause to get into change the option. Then press SEARCH/MENU to toggle the option on or Off (obviously, Off is for louder sounds).

Then either hold STOP or remove the battery to get the player out of the service mode. For some reason, you'll have to go back into the player's options to manually turn the backlight on again after doing this.

Note for NW-HD3 owners. A couple of you have had trouble backing out from the menu after applying the fix. Please hold in either the MODE or MENU buttons to exit the menus.

Again thank you for your custom, Feedback is left automatically upon receipt of your feedback.

Kind regards

NWA1000/3000 Volume Hack

Start with walkman turned off without hold mode of

Turn on power

Press the <Hold> key to put walkman into hold mode, screen shows **HOLD ON**

Hold down the <Artist Link> key at the left hand top side of the player and press the following buttons whilst keeping the <Artist Link> key pressed.

↑ ↓ <Option> ↑ ↓ → ← → ← ← <PLAY> <Option>

Release <Artist Link> key, the screen displays **POWER**

Press and hold the <Hold> key to set hold mode off, the screen shows **POWER**

press and release the ↓ key (usually twice) until the screen says **OTHERS**

press → the screen shows **G TEST**

press and release ↓ until screen says **SP SET**

press the <Play> key, the screen will say **ON**

press the <Option> key, the screen will say **OFF** (if you want to put your walkman back into restricted mode, change this setting back to ON).

Press <Play> key to accept the new setting, the screen will say **SP SET**

Hold the <Back> key for 1.5 seconds to return to normal use.